

WELCOME

INGENICO LANE/5000 EASY SETUP GUIDE (TRIPOS CLOUD)

Flawless design for all payment types

- Expanded payment options with both traditional and alternative payments
- Integrates easily into any environment
- Enhanced payment security with PCI PTS 5.x certification
- User-friendly and intuitive interface
- Lower total cost of ownership
- Flexible options for different business needs





<u> ∼</u> Welcome

Worldpay from FIS is proud to support ReyPAY[®] payments processing with a new partnership that offers you enhanced reporting, innovative technology and high-line support.

If you have any questions as you transition to the Worldpay platform, please call us at 866.304.4279 and select the option for ReyPAY credit card processing support. Support is available 24/7/365.





Please follow these three easy steps to setup your device

Step 1: Do this first - Unbox your Lane/5000

Unboxing the Ingenico Lane/5000

After unboxing your Lane/5000 you will find the below items.




Power Supply


Step 2: How to assemble your Lane/5000

Connecting the Ingenico Lane/5000

2A) Connect Lane/5000 Ethernet cable to the back of the Ingenico Lane/5000 and into one of the LAN ports on your network switch/internet router.*

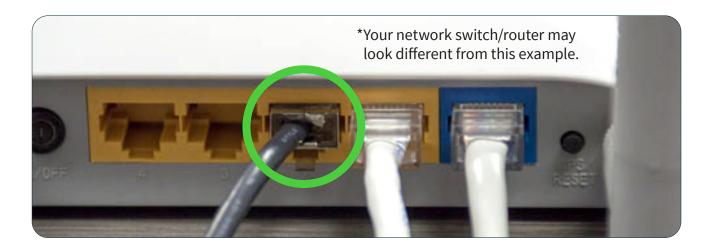

2B) Connect Lane/5000 power supply to 120V power outlet and to the back of the Lane/5000 Ethernet cable. *Note: Lane/5000 will turn on once connected to power.*

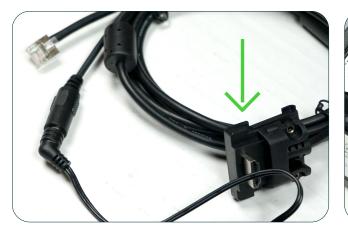



Step 2: (continued) How to assemble your Lane/5000

IMPORTANT NOTE FOR STATIC IP USERS: Your Lane/5000 is shipped with DHCP enabled, which means that when you connect to your network switch/ router, the router automatically assigns your device an IP address.

If you require a static IP address on your device follow the remaining Step 2 directions; otherwise, please proceed to Step 3.

2C)

- Physically disconnect the Ethernet cable from your network switch/ router while leaving the Lane/5000 powered on.
- Reboot the device by pressing and holding the green "Enter" key and the yellow "<" key simultaneously for two seconds.
- DO NOT reconnect the Ethernet cable to your network switch/router.

2D) Once the Lane/5000 is on, press 0-0-0-1, to access the **ADMIN MENU**.

If the "**Communication type**" is not set to Ethernet. Select "**Communication type**" > "**Ethernet**". The Lane/5000 will ask you to reboot. Select Yes.

ADMIN	MENU		
1-Communication	type		
2-Ethernet Parame	2-Ethernet Parameters		
3-Serial Parameter	rs		
	ADMIN MEN	J	
Lane/5000	1-Communication type		
	2-Ethernet Parameters		
	3-Serial Parameters		
L	ane/5000	ingenico	

2E) Select "**Ethernet Parameters**", then "**IP Configuration**", then "**DHCP activation**" and then select "**Off**" and press the green "**Enter**" key.

La	ne/5000	ingenico	Lane/5
	5-Port		Sub
	4-Server IP address		Sub
	3-Bind interface		IP a
	2-Connection type		off
	1-IP configuration		DHC
	ADMIN MEN	U	

	Ethernet configur	ation
	DHCP activation	
	IP address	
	Subnet mask	
La	ane/5000	ingenico

Step 2: (continued) How to assemble your Lane/5000

2F) Select "**IP address**". Enter the static IP assigned to the device then press the green "**Enter**" key.

	Ethernet configurat	tion	IP ad	dress
	DHCP activation		Enter IP addres	ss :
	IP address			
	Subnet mask		0.0.0.0	
La	ne/5000	ingenico	Lane/5000	ingenico

2G) Select "**Subnet mask**". Enter the subnet mask of the LAN this device is connected to then press the green "**Enter**" key.

Ethernet configuration	Subnet mask
DHCP activation	Enter Subnet mask :
IP address 0.0.0.0	
Subnet mask	0.0.0.0
Lane/5000 ingenico	Lane/5000 ingenico

- 2H) Press the red "Cancel" key once.
- 2I) Press the green "Enter" key when prompted to save changes.
- **2J)** Press the red "**Cancel**" key once. *Note The device should now reboot.* Reconnect the Ethernet cable to your router during this reboot process.

Step 3: Confirm your network setup

Once the devices are connected to your network, they should display an activation code: it will start with a "p" indicating it is a production device, followed by 6 numbers: p######. Please note the activation code will change every 15 minutes if they maintain their network connectivity.

If your devices have the activation code – they are ready for installation day with ReyPAY[®]. You can unplug the devices and put them back in their boxes until installation day.

If your devices do not display an activation code, and instead display a triPOS logo or System Information screen, you will want to review the below network requirements:

triPOS Cloud Network Requirements for Dealerships

Always make sure the network equipment and internet connection are working properly before you begin. Because device-cloud connections must use long-lived, persistent TCP connections, clients may need to remove packet sniffing/ security scanning for the ports used for triPOS Cloud from any network appliances/firewalls if connectivity issues are encountered.

Connectivity to triPOS Cloud should occur automatically however you may wish to confirm within the network configuration that outbound/inbound https traffic can reach the following:

- https://tripos.vantiv.com HTTPS on port 443
- device.tripos.vantiv.com TCP on port 9001
- Enable TCP/IP TLS v1.2 protocol for device.tripos.vantiv.com
- Minimum Internet Speed recommendation of 5 Mbps.

We recommend rebooting your device by holding the "#" and the yellow button together. You can also reboot the device by unplugging the power cable. Please make sure that you have reconnected the Ethernet cable to your internet router or network switch.



(this space is provided for your convenience to take any notes during setup)

About Worldpay from FIS

Worldpay from FIS (NYSE:FIS) is a leading payments technology company that powers global commerce for merchants, banks and capital markets. Processing 75 billion transactions topping \$9T for 20,000+ clients annually, Worldpay lifts economies and communities by advancing the way the world pays, banks and invests.


We create secure and scalable innovations that connect commerce across all geographies and sales channels. The company's integrated technology platform offers a unified and comprehensive solution set to help clients run, grow, and achieve more for their business.

With a 50+ year history in financial services, we remain ahead of the curve to outpace today's competitive economic landscape. By delivering simple, streamlined, and secure experiences for all of our clients and their customers, we embody commitment to every aspect of the financial services industry.

www.fisglobal.com

getinfo@fisglobal.com





Im linkedin.com/company/fis

©2021 FIS

Worldpay, the logo and any associated brand names are trademarks or registered trademarks of FIS. All other trademarks are the property of their respective owners. 1559054 / WFRR001 08.21



ADVANCING THE WAY THE WORLD PAYS, BANKS AND INVESTS™